


ELITE

Elite Kitchens of the Hudson Valley, Inc.


Adjusting Your Doors and Drawers

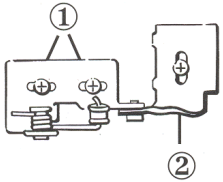

Knife Hinges:

For side adjustments: Loosen screws ①, adjust the door left or right, then tighten screws.


For height adjustments: Loosen screw ② on mounting plate, adjust door up or down, then tighten screws.

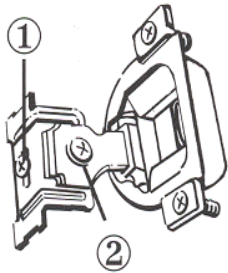

Cup Hinges:

For side adjustments: Loosen screw ② attaching the hinge to the frame plate; tighten when the proper position is achieved.

For height adjustments: Loosen screw ① attaching the hinge to the frame and move the door up or down to the desired position.

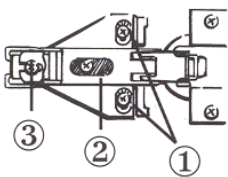


Easy Reach Hinges:

For side adjustments: Locate the concealed Phillips head screw ③. Turn to desired adjustment.

For height adjustments: Loosen screws ① on hinge plate, adjust door up or down, then tighten screws.

For forward or backward movement: Adjust Phillips head screw ② at the end of hinge arm.

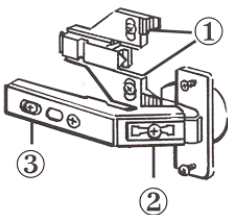

Bi-Fold Easy Reach Hinges:

For adjusting the gap between doors: Loosen screw ② on the shortest arm of the bi-fold hinge; tighten after adjustment.

For height adjustments: Loosen screws ① on hinge plate, adjust the door up or down, then tighten screws.

For forward or backward movement: Adjust inner screw ③ on the longer arm of the hinge.

Drawer Adjustments:

If drawer front appears crooked: Measure at each end to see if height is the same. If not, slightly loosen the screws attaching the drawer front to the drawer box. Adjust up, down or sideways, then tighten screws.

If drawer does not close evenly: Adjust the drawer guide attached to the cabinet by manually realigning the back of the guide. Once realigned, be sure to check that the drawer guide rollers stay in their track and operate smoothly.

EliteKitchens.org

Creating Kitchens for the Way You Live

1085 Indian Springs Rd.

Pine Bush, NY 12566

Ph (845) 744-5574 Fax (845) 744-5837